Demo Kit Quick-Start Guide

Instructions for Using ON Semiconductor's CMOS Image Sensor Development Kits

Introduction

Thank you for purchasing an ON Semiconductor CMOS image sensor development kit, which are USB-powered camera boards that enable easy testing and characterization of ON Semiconductor® sensors.

ON Semiconductor's sensor demonstration software, DevSuite enables you to display images from your sensor. This software is downloaded from ON Semiconductor's website.

Follow the instructions below to assemble the kit and to download and install ON Semiconductor's DevSuite software.

Before continuing, please ensure that you meet the Hardware and Software requirements listed in Appendix A.

Demo Kit Contents

Before you begin setting up the camera, please verify the components included in your particular kit. Please note that there are several types of kits.

Full Demo Kit contents

- ON Semiconductor development kit baseboard (Demo3)
- ON Semiconductor sensor headboard with lens
- USB3 cable, camera tripod

Headboard-only Demo Kit contents

- ON Semiconductor sensor headboard with lens

The kits listed above may contain optional auxiliary boards.
Note that you will have access to the User Guides once you install the DevSuite software; refer to section "Additional Applications and Resources" for details.

LC HDMI board

- Refer to its User Guide for connectivity instructions: HDMI_LC User Guide.pdf.

HSSAB board

- Refer to its User Guide for connectivity instructions: HSSAB User Guide.pdf.

Demo Kit Assembly

1. Connect the headboard and baseboard via the 26-pin female connector located on the back of the baseboard and the 26-pin male header on the back of the sensor headboard.
2. For a full demo kit, screw the mini-tripod into the tripod mounting block.
3. For optional auxiliary boards, refer to their User Guide.

Caution	**Do not connect the kit to your computer yet**

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.

Installing DevSuite

Download the base installer from here;
https://www.onsemi.com/pub/Collateral/DEVSUITE_SW.ZIP

Decompress the .zip file downloaded from the Web site and read the "Read-Me-First.doc" for information on the installation package.

To install the Software, double-click the file *setup.exe* and follow the instructions on your screen. If you have an earlier version of DevSuite on your computer, you will be prompted to uninstall it before proceeding with the new install.

After installation has completed, please review the Drivers User Guide:
"All Programs > Aptina Imaging > Docs > User Guides > Aptina Drivers User Guide"

Note that the following instructions mention the "Demo2X Board", but these instructions apply as well to the Demo3 Board.

Additional Product Software Installers

Some products require a separate software installer to be downloaded, and some require and NDA to be in place and some do not. In either case, you will be prompted with instructions.

- For products that do not require an NDA, you will be prompted with a URL to use to download the additional installer.
- For products that do require an NDA, you will be directed to a Web site where you can either login with your assigned credentials or request credentials.

Additional Support Software Installers

Some products require a Python library to be installed for certain products for the main demonstration application, DevWareX.
In these cases, you will be prompted with a URL to use to download the additional installer.
Here is that URL;

http://www.onsemi.com/pub/Collateral/PYTHON32BIT_SW.ZIP

Our color tuning application SensorTune requires a Matlab Runtime library to be installed.
In these cases, you will be prompted with a URL to use to download the additional installer.
Here is that URL;

http://www.onsemi.com/pub/Collateral/MCRINSTALLER.ZIP

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.


Starting Up the Software – XP Systems

Plug the kit into your computer using the USB cable provided. After a few seconds, your computer should detect new hardware and start the "Found New Hardware Wizard".


To complete the driver installation, follow the instructions in the document found via the start menu:
"All Programs > Aptina Imaging > Docs > User Guides > USB XP Driver User Guide"

Starting Up the Software – Windows7 Systems

Plug the kit into your computer using the USB cable provided. After a few seconds, your computer should detect new hardware and attempt to download the appropriate USB driver from the Microsoft driver server, during which this dialog should appear:

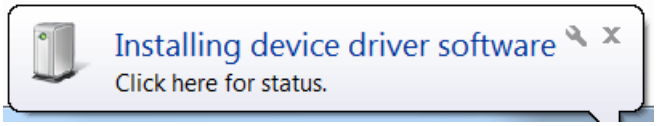


If the installation was successful, this dialog will appear:

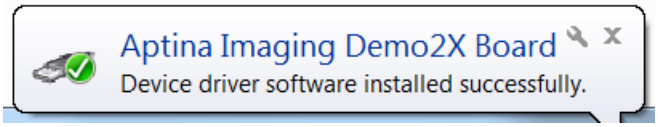

You are now ready to Launch DevSuite – please proceed to "Launching the DevSuite Application".

If the download fails (either due to a failed Internet connection or your system's Firewall settings, or incorrect FW on the ON Semiconductor development kit baseboard), this dialog will appear:

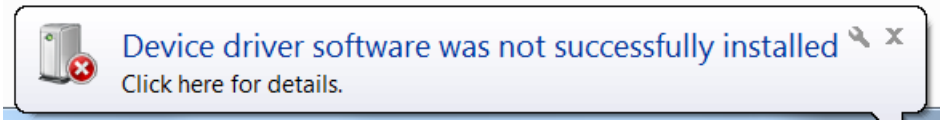

To resolve the issue, follow the instructions in the document found via the start menu:
"All Programs > Aptina Imaging > Docs > User Guides > USB Windows7 Driver User Guide"

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.

Launching the DevSuite Application


1. Go to the start menu, select "All Programs" then "Aptina Imaging" then "DevWareX." The popup window shown in Figure 1 will display as DevWareX probes for attached devices.
   Note: as described in the "Additional Product Software Installers" section, if the files required for your attached product are not found you will be prompted with a URL to download them.

Figure 1: DevWareX Popup – Searching for Attached Devices




2. After the software has found an attached device, the DevWareX window will appear with the dialog box shown in Figure 2 on page 3; select the settings shown. (Color/monochrome sensors will also need to have the color or monochrome box checked, as appropriate.) Click "Finish."

Figure 2: Startup Dialog

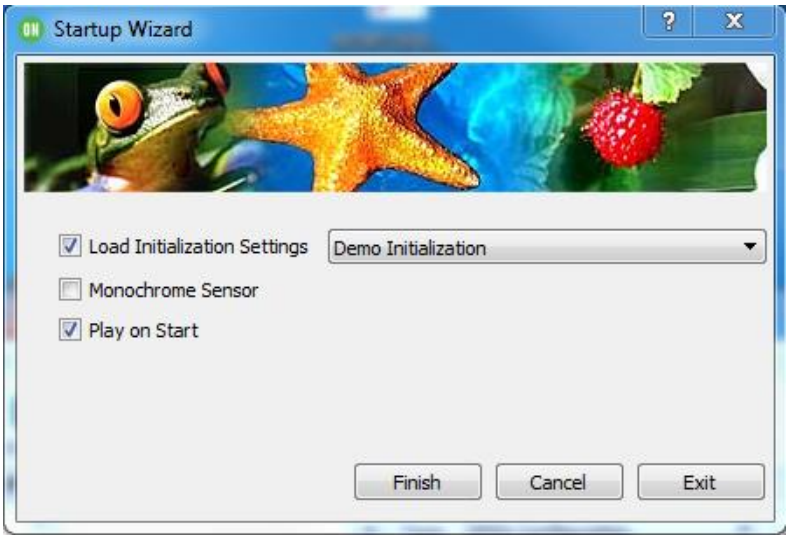

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.

Figure 3: DevWareX Main Screen

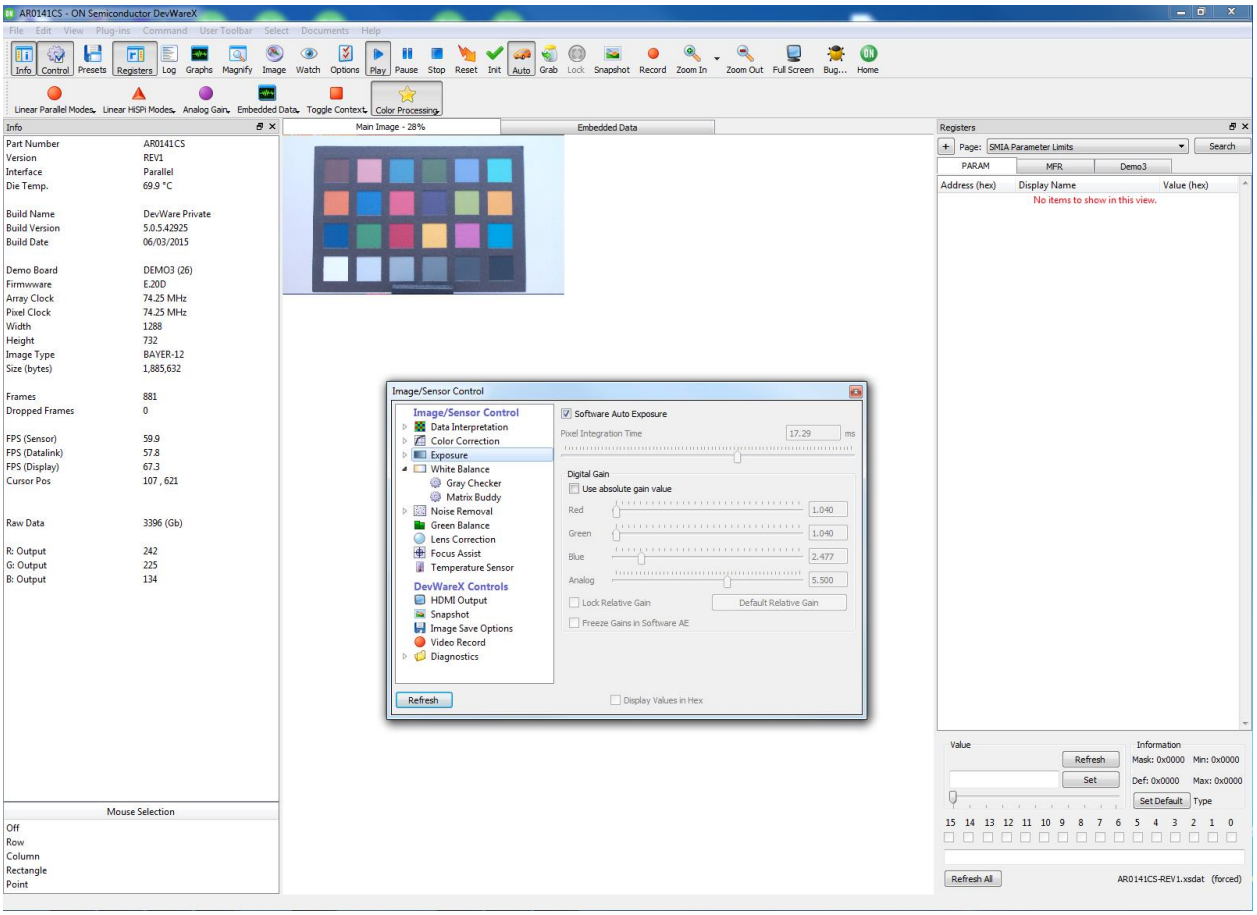

The installation is complete.

For assistance using DevWare, see the help files within the application. Users will also notice that tooltip" pop-ups" are available for many controls; simply pause the cursor over the control to read the tooltip.

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.

Additional Applications and Resources

There are several additional DevSuite applications and resources that are useful for demonstrating and configuring sensors.

Sensor Demo

Sensor Demo is demonstration software that runs DevWareX in an abbreviated mode. The console only shows a basic toolbar and display area allowing for quick demonstration of a sensor. If necessary, a dialog can be enabled by going to the View menu and selecting the appropriate dialog name. For example: View -> Info Dialog.
Sensor Demo can be launched via the desk-top shortcut.

Side-by-Side Demo

This application allows two ON Semiconductor Imaging Demo cameras to be simultaneously displayed side-by-side. It is useful for comparing differences in equal sized sensors, although dissimilar sensors may also be used together. Synchronous control of both images is provided for panning, zooming and play-state.
Side-by-Side can be launched via the desk-top shortcut.

Training Videos

A set of training videos can be found via the shortcut:
Start->All Programs-> Aptina Imaging->Training->DevWare Training.

Documentation

There are various sets of documentation, including User and Development Guides, found via the Windows shortcut:
Start->All Programs->Aptina Imaging->Docs.

The documentation is also available from within DevWareX from the “Documentation” menu item.

Software Development Kit (SDK) - ApBase

ApBase provides an API of the main functions of DevWare and is available for users to write their own applications to interface to ON Semiconductor sensors. Information can be found via the shortcut:
Start->All Programs-> Aptina Imaging->SDK.

ApBase files are included in the General Software installer, but a stand-alone installer is available for only the API files.
ApBase stand-alone; download and install the API.

Tools Shortcut

There are various other applications that can be found via the shortcut:
Start->All Programs-> Aptina Imaging->Tools.
Each has its own “Help” file.

AiViewer

A video viewing application is available for installation via this link

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor’s production data sheet specifications.

Trouble Shooting

- Application can't locate sensor data (.sdat) files.
  - Read the "Read-Me-First.doc" from the installation package to ensure that all required files have been installed.
  - Ensure that the installation package name is matched to the sensor.
- Windows 7: the USB driver can't be found, or device not recognized.
  - On an XP-based OS, run the "Hardware Update Tool" to ensure the correct version of FW is installed; see "USB Driver User Guide" for details. Accessed via:
    Start->All Programs->Aptina Imaging->Docs->User Guides
- The Frame Rate is very low.
  - The amount of data being processed is quite significant for large display sizes, especially on larger sensors. Lower the size of the displayed image.
  - Ensure that the HW and SW requirements as defined in Appendix A are met.
- "ApBaseCom" can't be registered during SW installation.
  - Usually limited to Windows 7 systems with SP2.
  - If this error appears during running the installation script, select "Ignore" to continue.
  - If ApBaseCom will used, do the following;
    - Open a CMD window and navigate to the installation folder (usually C:\Aptina Imaging)
    - Enter "regsvr32 apbasecom.dll".
- On XP on DevWare start-up, errors of "The procedure entry point …" are reported.
  - Ensure that Service Pack 3 (SP3) is installed.

Reporting Bugs

If you are having issues with any of the applications, please use the "Bug" icon on the menu bar to open "Bug Report" dialog. Your system and sensor configuration information will be filled-in automatically.
Please enter information in to "Bug Description" and "How to reproduce the bug" fields, select the "Copy to Clipboard" button, and then paste that information in to an Email using the address provided in the dialog.

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.

Appendix A

Requirements

Hardware and software requirements for ON Semiconductor's development kit are detailed below.

Hardware Requirements

- Pentium III 450 MHz or higher (a faster processor will improve the displayed frame rate on the PC). Advanced noise reduction, sophisticated demosaic, and high dynamic range processing are very CPU-intensive
- Available C: HDD space of at least 600Mb, even when installation will be to another drive.
- Available RAM at least sensor size times 40 bytes. For example 600MB available RAM for a 14MP sensor. Remember to account for RAM needed by the system and by other applications or memory-resident software when calculating total system RAM requirements
- USB 2.0 or USB 3.0 (preferred) host controller.
- Graphics card and drivers capable of handling the images from the sensor. Some graphics cards or drivers will not display images much larger than about 8MP

Software Requirements

- Windows XP with a minimum of Service Pack 3 or
- Windows 7 with a minimum of Service Pack 1.
- The latest drivers for the USB 2.0 and/or USB 3.0 host controller.
- Python; for products that require it, you will be prompted with the URL for the location of where to download the installer.
- Matlab Runtime Library; DevSuite's SensorTune application requires this.
  You will be prompted with the URL for the location of where to download the installer.

ON Semiconductor reserves the right to change products or specifications without notice.
© 2015 ON Semiconductor Imaging Corporation All rights reserved.
‡Products and specifications discussed herein are for evaluation and reference purposes only and are subject to change by ON Semiconductor without notice. Products are only warranted by ON Semiconductor to meet ON Semiconductor's production data sheet specifications.