

Duty Cycle and Power Optimization



ON Semiconductor®

www.onsemi.com

APPLICATION NOTE

Duty Cycle

General

Consider a battery powered device (target), which should receive data from a second device (initiator) from time to time. To reduce power consumption, the target switches its receiver on for only a short while, checking if there is any RF activity, and returns to sleep if there is no data to receive.

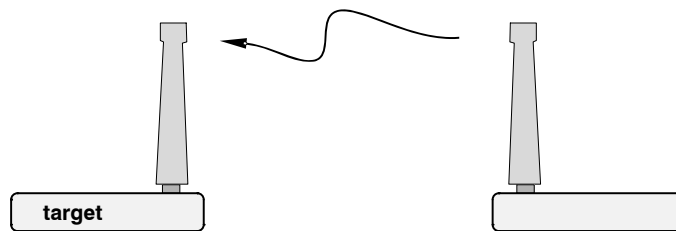


Figure 1. Definition of Initiator and Target

The ratio of the time t_{on} during which the target is powered on, to the time t_{off} during which the target is powered off is called duty cycle. If for example the target is powered off for 1 second, powered on for 1 millisecond, powered off for 1 second and so on, its duty cycle is 1:1000.

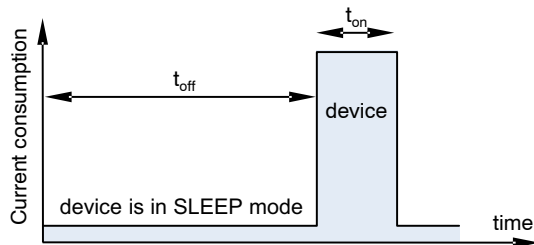


Figure 2. Illustration of Duty Cycle

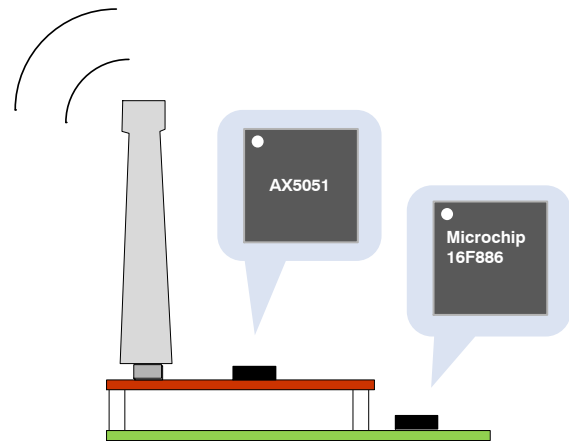


Figure 3. Hardware Used for Duty Cycle Measurements

Hardware Description

The hardware used in this document consists of an AX5051 evaluation board that is plugged into a suitable controller board, containing a PIC16F886 microcontroller from Microchip. The microcontroller is required to configure and control the AX5051 transmitter.

The PIC16F886 has a feature called 'Ultra low power wake up' (ULPWU). With this feature, an external capacitor is charged when the system is running, and discharged when the system is in sleep mode. When the condensator voltage reaches a defined level, the processor is woken up by an interrupt. This feature is very suitable for duty cycle applications.

Software Description

The software demonstrates how duty cycle can be implemented in software. The software can be compiled for the transmitter or for the receiver. When defining CONST_TX, the source code will be compiled for the transmitter, if CONST_RX is defined, the source code will be compiled for the receiver. Make sure, only CONST_TX or CONST_RX is defined at one time. The transmitter sends a 1.2 s long preamble every time a button is pressed. After the data is transmitted, it enters sleep mode and consumes only 650 nA. The receiver is in sleep mode too, but it wakes

up every second. First the crystal oscillator needs to be switched on. This can take 1.7 ms. After the crystal oscillator is running, the receiver is switched on and the program checks if the RSSI is above the defined threshold. If this is the case, 5 bytes of data are received, to check if there is a valid preamble present. If the transmitter is sending data at that time, the receiver will be switched on, until the data is received. This will take max. 1.2 seconds. After this the receiver is switched off, and the controller enters sleep mode again. See Figure 4 for an illustration of the flow during the wake up phase.

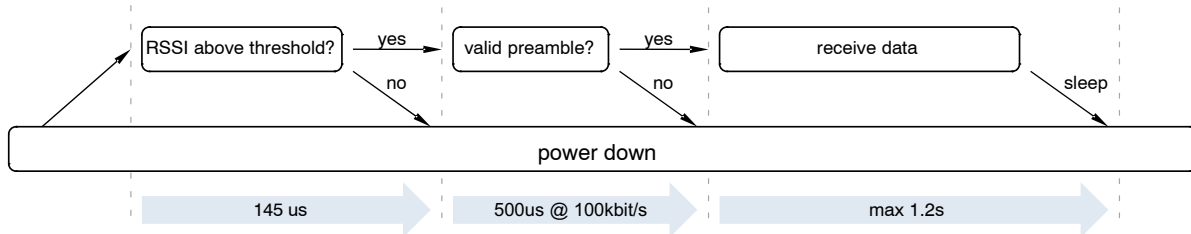


Figure 4. Flow During Duty Cycle Wake Up

The software was compiled and tested with sdcc. To compile the code, please install the gputils (<http://gputils.sourceforge.net>), and modify the makefile according to your system settings. For downloading and debugging, the MPLAB IDE from Microchip was used together with the MPLAB ICD2 programmer/debugger.

Important

- Make sure, that when porting the software to another platform, calling delay(x) will keep the processor busy for x ms. The delay must be exact, otherwise some parts of the program may not work correct (e.g. starting the crystal oscillator).
- As mentioned above, CONST_RX and CONST_TX must be defined before compiling the code.
- The PIC16F886 has a hardware stack, so the number of function calls is limited to only a few levels. Because of this fact, the whole state machine is implemented in the main loop. Avoid calling functions within other functions whenever possible!

Dynamic RSSI Threshold Level Calculation

There are several problems with a fixed RSSI threshold level. If it is set too high, valid data arriving with low levels will not wake up the target, even if it could have received the data correctly. Loss of sensitivity is the result. The other problem arises, when the RSSI level is set too low. In this case, the RSSI check will always be positive, thus the target will stay in RX mode longer than required. Higher current consumption is the result. There is a trade-off between sensitivity and current consumption that must be considered by the developer.

There is no RSSI threshold suitable for every situation. Consider a situation, where the target is placed in a very noisy environment. This will require a higher RSSI threshold than if the target is placed in an environment where the background noise is low. For targets, that change the location regularly (car key for instance) it is required, that the RSSI threshold is adapted dynamically. This can be done by averaging a certain number of RSSI values that were calculated in previous wake up phases.

Duty Cycle with AX5051

All results in this document are obtained by using the AX5051 as an RF receiver, which is being switched on every second. At first the RSSI is checked against a predefined threshold to determine if there is any RF activity present. If not, the AX5051 is switched off immediately by the microcontroller. Otherwise 5 bytes have to be received to determine if a valid preamble is present. To wake up the receiver, the transmitting unit needs to transmit a preamble which is longer than the time t_{off} .

There are three stages used: Sleep, crystal startup and receive:

Sleep

Microcontroller and receiver are switched off for nearly one second. To wake up the microcontroller from sleep, a low power oscillator is required. The power consumption of the microcontroller in sleep mode was measured to be $0.65 \mu\text{A}$. The current consumption of the AX5051 in power down mode was measured to be $0.73 \mu\text{A}$.

Crystal startup

When the AX5051 comes out of power down mode, it takes some time until the crystal oscillator settles on its nominal frequency of 16 MHz. The time until the crystal is fully settled, was measured to be 1.7 ms. The current drawn by the controller was measured while it was running at full speed (8 MHz).

Receive

After the crystal has settled, the receiver is switched on. At first the RSSI is calculated to see if it is above the defined threshold. If not, sleep mode is entered immediately. Otherwise 5 bytes are received, to check if a valid preamble is present. All diagrams in this document assume that no valid preamble is present (which is the normal case).

To provide a general impression, the currents drawn by the AX5051 and the microcontroller were measured separately. Note that the microcontroller's current consumption is device specific and must be evaluated individually.

AND9310/D

Scenario with 100 kbit/s

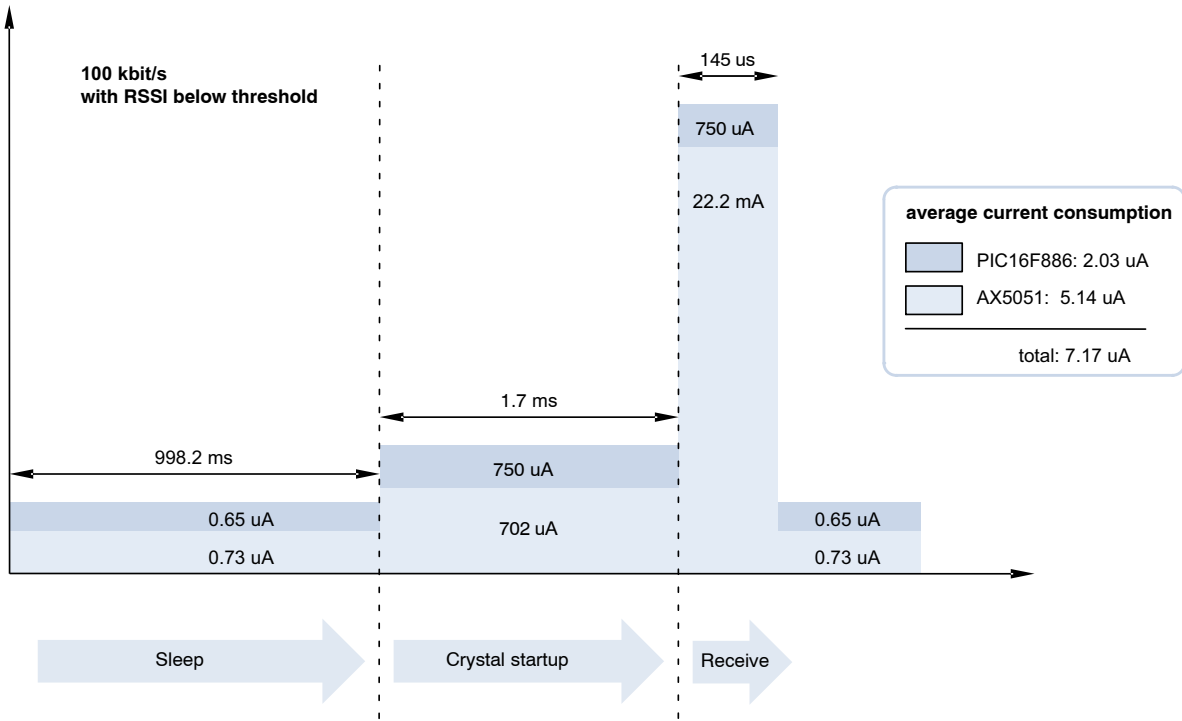


Figure 5. Current Consumption with 100 kbit/s, RSSI below Threshold

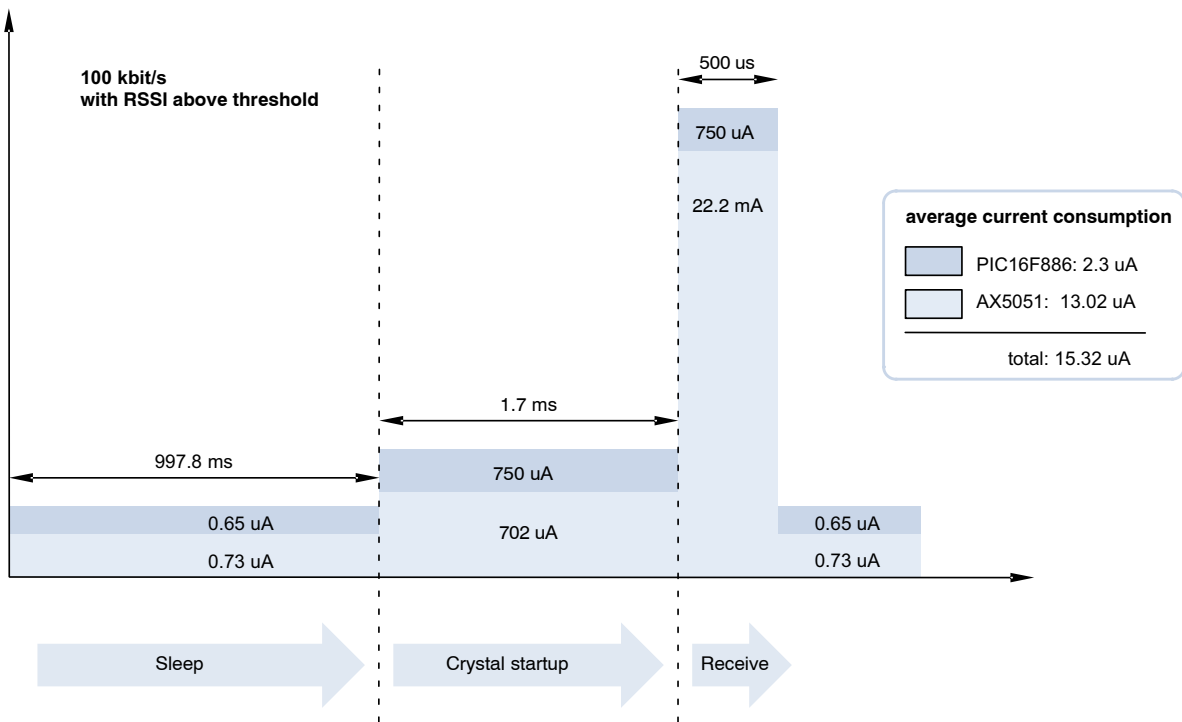


Figure 6. Current Consumption with 100 kbit/s, RSSI above Threshold

AND9310/D

Other Scenarios

Table 1 compares the current consumption for different bitrates. Note that the current consumption for every bitrate

choose is equal, if the RSSI is below the threshold. This is due to the fact that calculating the RSSI is independent of the bitrate.

Table 1. AVERAGE CURRENT CONSUMPTION FOR DIFFERENT BITRATES

Bitrate [kbit/s]	AX5051 Current [μ A]		PIC16F886 Current [μ A]		Total Current [μ A]	
	RSSI Low	RSSI High	RSSI Low	RSSI High	RSSI Low	RSSI High
1.2 (FSK)	5.14	744.12	2.03	26.98	7.17	771.09
4.8 (FSK)	5.14	189.14	2.03	8.24	7.17	197.38
9.6 (FSK)	5.14	96.64	2.03	5.12	7.17	101.76
38.4 (FSK)	5.14	27.27	2.03	2.78	7.17	30.05
100 (FSK)	5.14	13.02	2.03	2.3	7.17	15.32
250 (FSK)	5.14	7.69	2.03	2.12	7.17	9.81
400 (FSK)	5.14	6.36	2.03	2.07	7.17	8.43
600 (FSK)	5.14	5.62	2.03	2.05	7.17	7.67

Conclusion

The current used during receive mode is the main factor impacting the average current consumption (this is especially true for low bitrates). It is therefore very important to keep the time when the receiver is switched on, as short as possible. Even if the AX5051 does not have built in WOR (Wake On Radio) capabilities, the overall current

consumption (including the microprocessors current) is low compared to competitors. This is achieved by using the great flexibility provided by the AX5051 that makes it possible to reduce the time, the receiver is switched on, to a minimum. With the flexibility of the AX5051, one is free to optimize for own requirements, and is not bound to a specific packet format.

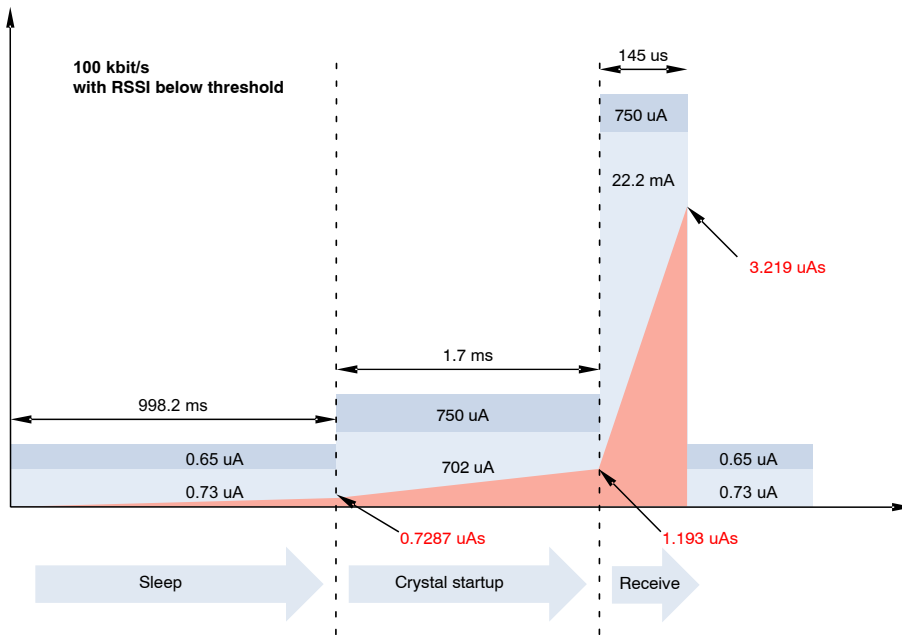


Figure 7. Distribution of Current Consumption During One Cycle

AND9310/D

Appendix

References

AX5051 Downloads


- Download AX5051 datasheet and programming manual from <http://www.onsemi.com>
- Download duty_cycle source code from <http://www.onsemi.com>

AX5051 Hardware

- Find local distributors for AX5051 transceiver at <http://www.onsemi.com>
Order development kit AX5051-DVK at <http://www.onsemi.com>

PIC16F886 Microcontroller

- Datasheet for the microcontroller used <http://ww1.microchip.com/downloads/en/DeviceDoc/41291E.pdf>

ON Semiconductor and  are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that ON Semiconductor was negligent regarding the design or manufacture of the part. ON Semiconductor is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

PUBLICATION ORDERING INFORMATION

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor
19521 E. 32nd Pkwy, Aurora, Colorado 80011 USA
Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada
Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada
Email: orderlit@onsemi.com

N. American Technical Support: 800-282-9855 Toll Free
USA/Canada
Europe, Middle East and Africa Technical Support:
Phone: 421 33 790 2910
Japan Customer Focus Center
Phone: 81-3-5817-1050

ON Semiconductor Website: www.onsemi.com

Order Literature: <http://www.onsemi.com/orderlit>

For additional information, please contact your local Sales Representative